Help Desk / Support Details

All Countries E-mail: tech@swann.com.au

Telephone Helpdesk

UNITED STATES toll free
877-274-3695
(Sun-Thurs, 2pm-10.30pm PST)
800-627-2799
(Mon-Fri, 9am-1pm PST)

USA Exchange & Returns
562-777-2551
(Mon-Fri, 9am-4pm PST)

AUSTRALIA toll free
1300 13 8324
(Mon-Fri, 9am-5.30pm Aus EST)

International
+61 3 8412 4610
(Mon-Fri, 9am-5.30pm Aus EST)

See http://www.worldtimeserver.com for information on different time zones and the time in Melbourne Australia compared to your local time.

Warranty Information

Swann Communications warrants this product against defects in workmanship and material for a period of one (1) year from it's original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labour, or replaced at the sole discretion of Swann. The repair or replacement will be warranted for either ninety days or the remainder of the original one year warranty period, whichever is longer. The end user is responsible for all freight charges incurred to send the product to Swann's repair centres. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin. The warranty does not cover any incidental, accidental or consequential damages arising from the use of, or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person, or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only, and is not transferrable to any third party.

Unauthorised end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.

www.swannsecurity.com

English

StyleCam
Security Camera
with Night Vision

STOP

Swann Help Desk
Has the answers

If this device does not work when you first plug it in, do not take it back to the store.

- Contact the Swann Helpdesk using our fast e-mail service **tech@swann.com.au** or call us on one of the Toll-Free numbers shown on the back cover of this booklet.
- Most problems can be quickly and easily fixed with a simple e-mail or a quick chat with one of our friendly technical staff. (Toll-Free available in the US and Australia only)

FCC NOTICE
This device complies with Part 15 of FCC Rules.
Operation is subject to the following conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received,
Including interference that may cause undesired operation.

Installation Guide

Installation Instructions

The StyleCam camera is designed for use with any TV, VCR, Security Monitor or computer with a video capture card. The camera has a visual image and can be used indoors or in a sheltered position outside. The StyleCam camera can be used for a variety of purposes including monitoring callers at the door, keeping your car, yard, shop or warehouse under observation or used as a camera to monitor your baby.

Contents and Parts Identification

1. Camera with Stand with lead and 18m extension cable
2. DC Power Adaptor (adaptor design varies depending on country)

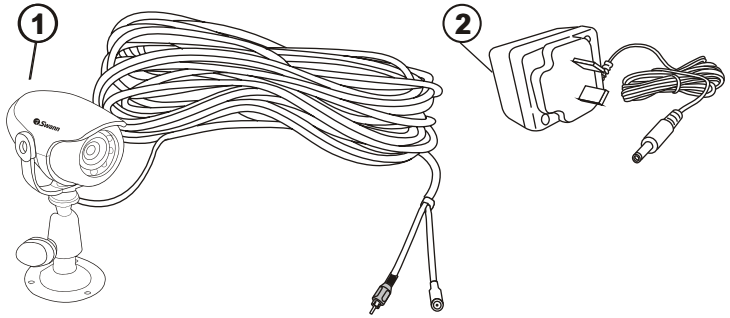

How to connect StyleCam camera to your TV or VCR

Your StyleCam security camera is designed to transmit high quality color images during daylight and B&W images at night to your television or recording device. To help guide you through the process of setting up the StyleCam camera, we have outlined the steps and numbered each of the components required in the diagram below.

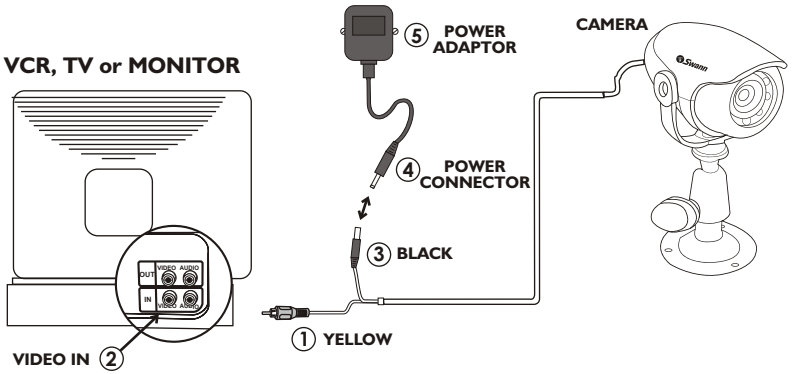

* To extend the operating distance from your TV or VCR use the 18m cable included or for more length purchase an A/V extension cable (sold separately) which are available at most electronics stores.

Note: We do not recommend extending the cable length past 330 Feet/100 metres where loss of signal may occur. Multiple cable sections connected to make up one cable length will drastically reduce the video signal distance.

How to connect StyleCam camera to your TV or VCR

Step 1: At the end of your StyleCam camera cable or extension cable you will find two colored plugs:
- Yellow (Video RCA)
- Black (DC Power)

Step 2: Plug the **yellow** RCA plug (1) into the **"Video In"** input (2) (usually located at the back of your TV or VCR).

Step 3: Connect the **black** plug (3) at the end of the cable into the **black** plug at the end of the **power adaptor** (4).

Step 4: Plug the **power adaptor** (5) into an outlet or power point in your wall.

Step 5: If you have an **A/V TV** with RCA sockets you will need to switch the **TV** to the **AV** channel on your **TV** to view the camera. To connect the StyleCam camera to your **VCR**, you will need to turn the **VCR** to the **A/V Input** selection and turn your **TV** onto the channel you would normally use to view a tape or movie on your **VCR**. This channel may be activated by a button on your remote that is sometimes marked with this symbol ⍈, or L1 or L2 or possibly AV1 or AV2.

Note: The StyleCam will automatically turn on the Infra-Red LEDs when available light is too low to support a clear picture.

Note: Please read the **instructions** for your **VCR** or **TV** for more information on using their **A/V inputs.**

Mounting the camera on your wall or ceiling

1. Once you have chosen the best position for the camera, switch the power to the camera off, and unplug the power lead from the camera.
2. When mounting the StyleCam camera to your ceiling or wall, please ensure that you rotate the camera so that at the top of the camera lens is 'up', otherwise you will find that your pictures are displayed upside down. (see diagram)
3. Hold the camera base in the position you wish to fix it, and mark the holes with an appropriate pen or pencil. Once this is done, remove the stand and drill a hole with the appropriate drill bit for the material you are mounting your camera to and the screws or fasteners you are using.
4. Run the camera cable back to the TV/VCR, any holes that you drill need to be at least $^{9}/_{16}$" (14mm) in diameter to allow the connectors to pass through.
5. Reconnect the power lead to the camera and switch the camera power back on.
6. Position the camera and firmly lock the stand into place. Do not over tighten or forcefully adjust the camera once it has been correctly positioned.